

NZXT.



BETA

User's manual

Thank you.

Dear valued customers,

Thank you for purchasing our product. We are thankful to all our fans for the continuing support, after just four years since entering the computer chassis market with the Guardian in 2003, NZXT is now an established gaming brand and manufacturer of quality hardware in the market today. Since then, we have stayed true to our goal, which was to continuously provide innovative next generation products. With every product, we are still breaking more boundaries and limits. Once again, thank you and all NZXT fans for the support and we hope to bring more amazing products in the coming years.

After you complete your installation, please come by our community forums at www.nzxt.com/forum and voice your opinions with thousands of NZXT fans from around the world

Sincerely,
NZXT Team

BETA Specifications

Features

- :: Fits ATX standard motherboards and power supplies
- :: Fits large 10.5" performance graphics cards
- :: Expanded cooling directly cools video cards and CPU
- :: Screwless installation for hard drives and external 5.25" drives
- :: Black internal finish for sleek look
- :: Meshed front panel allows for better airflow than traditional cases
- :: Top mounted USB/Audio for convenient usage

Detailed specifications

4 x External 5.25" Bays
5 x Internal HDD bays

Cooling Options:
1 x 120 mm Blue LED Intake (Included)
1 x 120mm Rear Exhaust
2 x 120mm Side Intakes

Table of Contents

Thank you.....	1
BETA Specifications	2
Before Beginning..	3
Getting starting.....	3
Motherboard Installation	4
LED, Power and Reset Installation.....	4
External 5.25" / 3.5" Drive Bay Installation	7
Internal 3.5" Drive Bay Installation.....	10
Support and Service	12

NOTE: CPU, RAM and any peripheral installation are not included in this manual. Please refer to your motherboard manual for related mounting instructions and troubleshooting.

Before Beginning..

For safety issues, it is highly recommended that all users wear gloves during installation. Also, if you have any questions during installation, please send an email to service@nzxt.com before proceeding. Thank you.

 
Getting starting

For users building a new system, it is recommended that the side panels are removed before beginning the installation. The following steps will outline the steps to remove the top, side panels and the motherboard tray.

1. Remove the thumb screws securing the side panels.



2. Pull the side panel back, and then lift the panel to remove it.

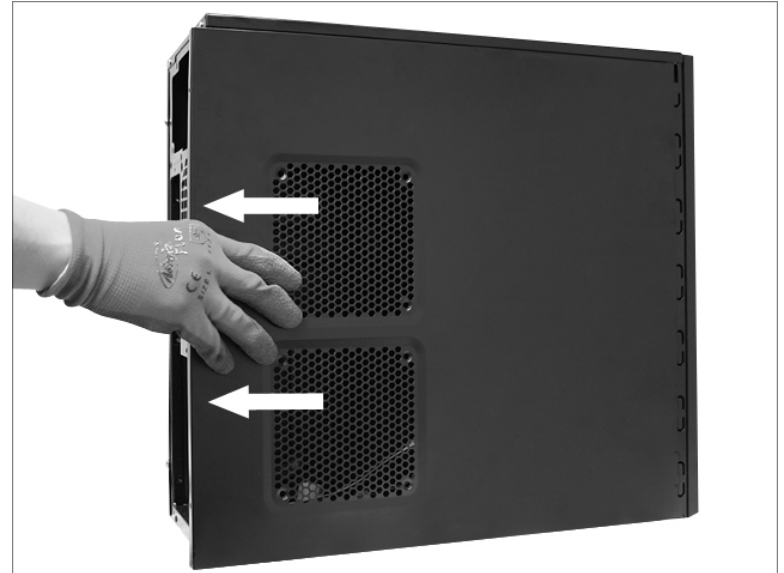

Motherboard Installation

Please refer to the case interior infrastructure and secure the power supply at the back of the case by using the screws provided.

1. Match the motherboard form factor (ATX, M-ATX, Mini-ATX) with the holes on the motherboard tray
2. Secure the standoffs onto the holes which match your motherboard
3. Lay the motherboard onto the standoffs and then continue to secure the motherboard with the screws provided.

LED, Power and Reset Installation

Please refer first to your motherboard manual to locate where the power switch and reset pins are located. The power and reset buttons are located at the top of the chassis. The colors following each instruction designate the color of the wires.



USB, Audio ports, E-SATA, Reset, and Power buttons

1. Connect the reset switch (labeled RESET SW) by connecting to your motherboard RESET connector. Make sure you always attach the white wire to ground. (Purple/White +/-)
2. Connect the power switch pin (labeled POWER SW) to the PWR connector on the motherboard. (Yellow/White +/-)
3. Connect the HDD LED (labeled H.D.D LED) to the appropriate headers on your motherboard. The HDD LED located on the front panel should flash Blue when there is activity in the hard drive. (Green/White, +/-)
4. Connect the POWER LED (labeled +P LED/-P LED) to the appropriate headers on your motherboard. (Blue/White, +/-)

 


HDD LED location

All White and Black Pin Connectors correspond to ground.

USB Installation

1. The USB is located of the top on your front panel.
2. Refer to your motherboard manual and match the labels on the USB port connectors with your motherboard in order to install.

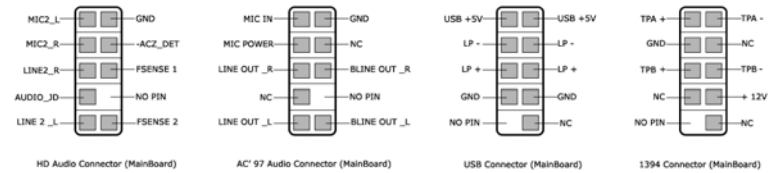


Audio Port Installation

1. Please first refer to your motherboard manual and match the labels on the audio wires with your motherboard pins.
2. The green input is the speaker input and the pink input is the microphone input.

Case Pins	Signal Description	ASUS® Pins
MIC-IN	Front Microphone input Signal	MIC2
MIC-POWER	Front Microphone Power	MICPWR
GROUND	Front Audio Ground	AGND
L-OUT	Front Left Channel Audio Signal	Line out_L
R-OUT	Front Right Channel Audio Signal	Line out_R
L-RET	Rear Left Channel Audio Signal	BLINE Line out_L
R-RET	Rear Right Channel Audio Signal	BLINE Line out_R

 FP_AUDIO

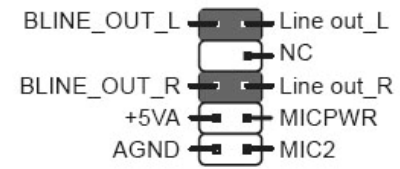

ASUS® Motherboard Pin Assignment

External 5.25" / 3.5" Drive Bay Installation

Please follow the directions below to install the 5.25" in the Beta chassis, follow the same instructions for the 3.5" external bay:

1. Remove the front panel of the chassis by pulling from the opening at the bottom of the front panel.



2. Remove the 5.25" black mesh for the 5.25" bay, by pushing the clips aside



3. Slide the 5.25" drive in from the front of the chassis.



Insert the 5.25" Device through the opening

4. Match the holes with the bay and the screw less bracket



Attach the screw less bracket matching the 5.25" holes

5. Turn the screw less bracket to lock the drive.




Turn and lock the device in place. User may choose to screw the device on also.

Internal 3.5" Drive Bay Installation

The NZXT BETA comes standard with one external 5.25" to 3.5" bracket attached to the inside the 3rd bay. Please follow the directions below to install the internal 3.5" devices:

 1. Open the side panel to gain access inside the chassis.
2. Take the screw less rails from the hard drive cage
3. Attach the rails onto the hard drive.

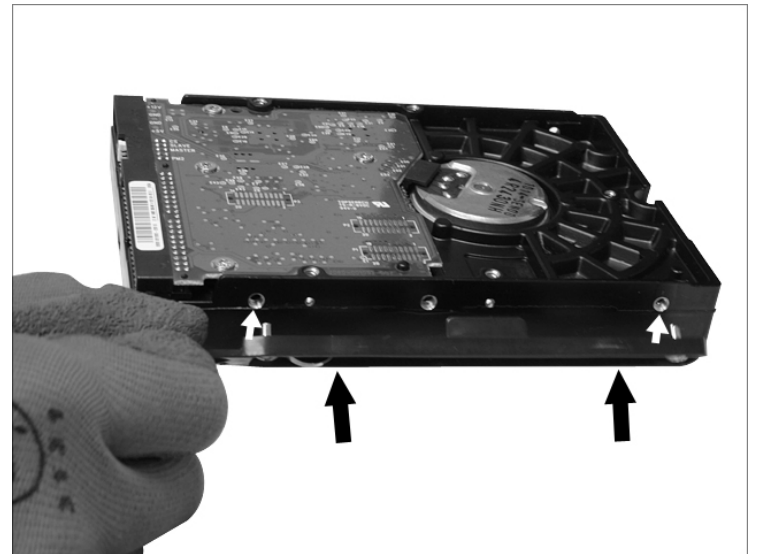



4. Slide the bracket back into the cage to secure it.





Support and Service

If you have any more questions or have problems with the NZXT product you purchased, please don't hesitate to contact service@nzxt.com along with a detailed explanation of your problem and your proof of purchase. You may inquire about replacement parts at rma@nzxt.com.

Thank you again for purchasing an NZXT case. If you have any more comments or questions. Please visit our website or send us an email.

NZXT Website: www.nzxt.com

Email our design team: designer@nzxt.com